

INSTRUCTIONS FOR MULTIMEDIA EQUIPMENT

Locate the Sharp projector remote. It should have a **RED** button (STANDBY) and a **GREEN** (ON) button at the top of the remote. This is the projector remote, you will use this remote to toggle to and from different inputs.

Here is a list of all working inputs and their uses. (Other button(s) will not work.)

- Computer 1/Input 1: Images are projected from instructors' workstation or laptop computer onto the screen.
- Computer 2/Input 2: Images are projected from the document camera onto the projected screen.
- Video/Input 4: Images or movies are shown from the DVD or VCR tapes onto the projected screen.

How to Use the Workstation Computer or Laptop Computers

- 1) Turn power ON to LC-data projector, using the LC-data remote control, point the remote at the projector on the ceiling. The light on the bottom of the LC-data will turn green and the projector will take a minute to turn on completely.
- 2) Using the Sharp LC-data projector remote, push the COMPUTER1/INPUT 1 button until COMPUTER/INPUT 1 is displayed.
- 3) Select CPU on the Receiver selector knob for audio.
- 4) <The receiver must be powered up for sound>
- 5) If using a laptop computer, connect it to the VGA cord that is labeled LAPTOP on the workstation.
- 6) Check to make sure the power to your computer is turned on.



How to Use the Document Camera

- 1) Turn power ON to LC-data projector, using the LC-data remote control, by pointing the remote at the projector on the ceiling. The light on the bottom of the LC-data will turn green and the projector will take a minute to turn on completely.
- 2) Using the LC-data projector remote, push the COMPUTER 2/INPUT 2 button until COMPUTER 2/INPUT 2 is displayed.
- 3) Turn power ON to the Document Camera, by pushing the **Green** power button on the lower left side.



How to Play VCR Tapes or DVD's

- 1) Turn power ON to LC-data projector, using the LC-data remote control, point the remote at the projector on the ceiling. The light on the bottom of the LC-data will turn green.
- 2) With the LC-data projector remote, push VIDEO/INPUT 4 until VIDEO/INPUT 4 is displayed.
- 2) Select VCR/DVD or Video1 on the Receiver selector knob. (See Below)
Note: (Use Video 1 for both VCR and DVD, some older room may have separate VCR/ DVD settings.)
- 3) <The receiver must be powered up for sound>
- 4) Locate the VCR/DVD combo player and turn the Power to ON.
- 5) Insert your VCR tape or DVD into the player and press play.

How to Set Volume for Sound to Computer & VCR/DVD's

- 1) Locate the receiver which is below the VCR/DVD combo player.
- 2) Turn power to the receiver to ON.
- 3) There are two knobs on the front of the receiver:
- 4) The smaller knob is the Input Selector.
For Computer audio turn the Selector knob to Computer.
For VCR or DVD audio turn the Selector knob to VCR/DVD.
For External audio turn the Selector knob to Front In/Video 3/
Portable AV.(See Below)
The larger knob is the volume control.



*Input selector(smaller knob)
and Volume Control (larger knob)*

How to Set Volume for External Audio or Video Source ie.(Ipod or Video camera)

- 1) Locate the receiver and turn power ON.
 - 2) Change input selector to FRONT/INPUT 3/ Portable AV and set the Projector to VIDEO/Input4.
 - 3) Plug your external device (ie. Ipod, Video camera) into the front jacks on the receiver.
Video is yellow and audio is **Red** / White.
- Please be sure to turn off all equipment in the workstation, as well as the LC-data projector on the ceiling, when you're finished!

If you need assistance, or have any questions, call: ITS Technical Help Desk: 464-1838